

RubberTough® 360

Field Service Flexible Hinge Replacement Instructions

This procedure describes the process to service the RubberTough 360 flexible hinge on an existing installation in the field with the socket base still attached to the ground.

Tools Required & Materials:

- Socket Wrench
- 12" Socket Extension
- 9/16" Box End Wrench
- Utility Knife
- 3/4" Socket
- 9/16" Socket
- Pry bar or Large Flat Blade Screw Driver

Procedure:

Step 1: Cut away the old hinge with the utility knife.

Step 2: Use the 3/4" socket wrench to remove the 1/2" bolt in the center of the hinge.

Step 3: Use a pry bar or large flat blade screwdriver to remove the hold-down disc.

Step 4: Remove the broken section of hinge from the socket mount by prying between the hinge lip and the socket mount flange while pulling up on the hinge with your hand. Twisting the hinge may make it easier to remove.

Step 5: Assemble the lock washer, washer and hold-down disc on the 1/2"-13 x 2-1/4" bolt and insert it into the hinge tube with the 3/4" socket on the socket extension as shown. **IMPORTANT!!** Position the flat of the hold down disc so that it faces the hole in the side of the hinge tube.

Step 6: While holding the bolt and hold down disc assembly in the bottom of the hinge tube, insert the hinge tube assembly into the socket base and align the index mark on the hinge tube to the long side of the socket base plate. Tighten the bolt firmly. The factory tightening torque is 30 ft-lbs.

Step 7: Drop the inner tube into the hinge tube.

Steps 8, 9 & 10: Place the post on the hinge and install the 3/8" x 4" bolts, flat washers and locking nuts. Tighten the nuts until they are flush with the bolt end.



SAFE-HIT, 35 EAST WACKER DRIVE, SUITE 1100, CHICAGO IL 60601
PH: (800) 537-8958 FX: (800) 770-6755

RubberTough[®] 360

Field Service Flexible Hinge Replacement Instructions



Step 1: Cut away the old hinge tube.



Step 2: Remove the 1/2" center bolt.




Step 3: Remove the hold-down disc.



Step 4: Remove the old hinge section.



Hinge Section Parts: left to right – hinge tube, inner tube, hold-down disc with 1/2" bolt and washers.

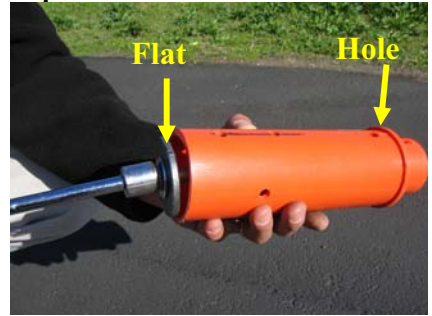

Step 5: Insert the hold-down disc assembly into the hinge tube



View looking inside the hinge tube. Flat is lined up with the hole.



Step 6: Align the hinge tube index mark as shown and tighten the 1/2" bolt.



Step 7: Drop the inner tube into the hinge tube.



Step 8: Place the post on the hinge.



Step 9: Install the 3/8" x 4" bolts, flat washers and locking nuts.



Step 10: Tighten the nuts until they are flush with the bolt end.