
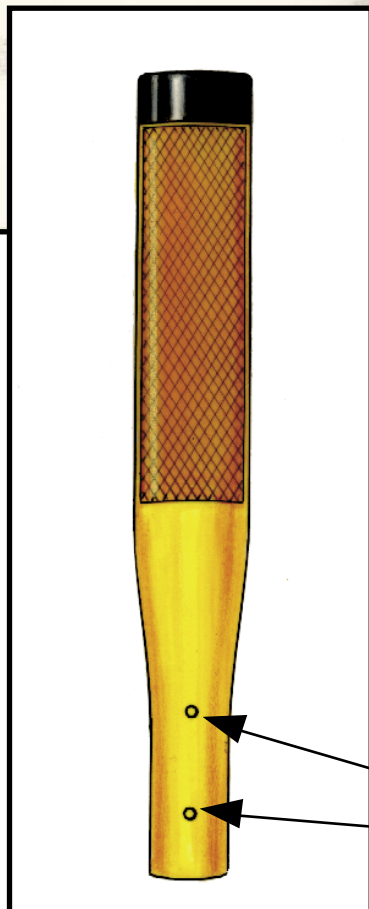


GUARDRAIL DELINEATOR

Installation Instructions

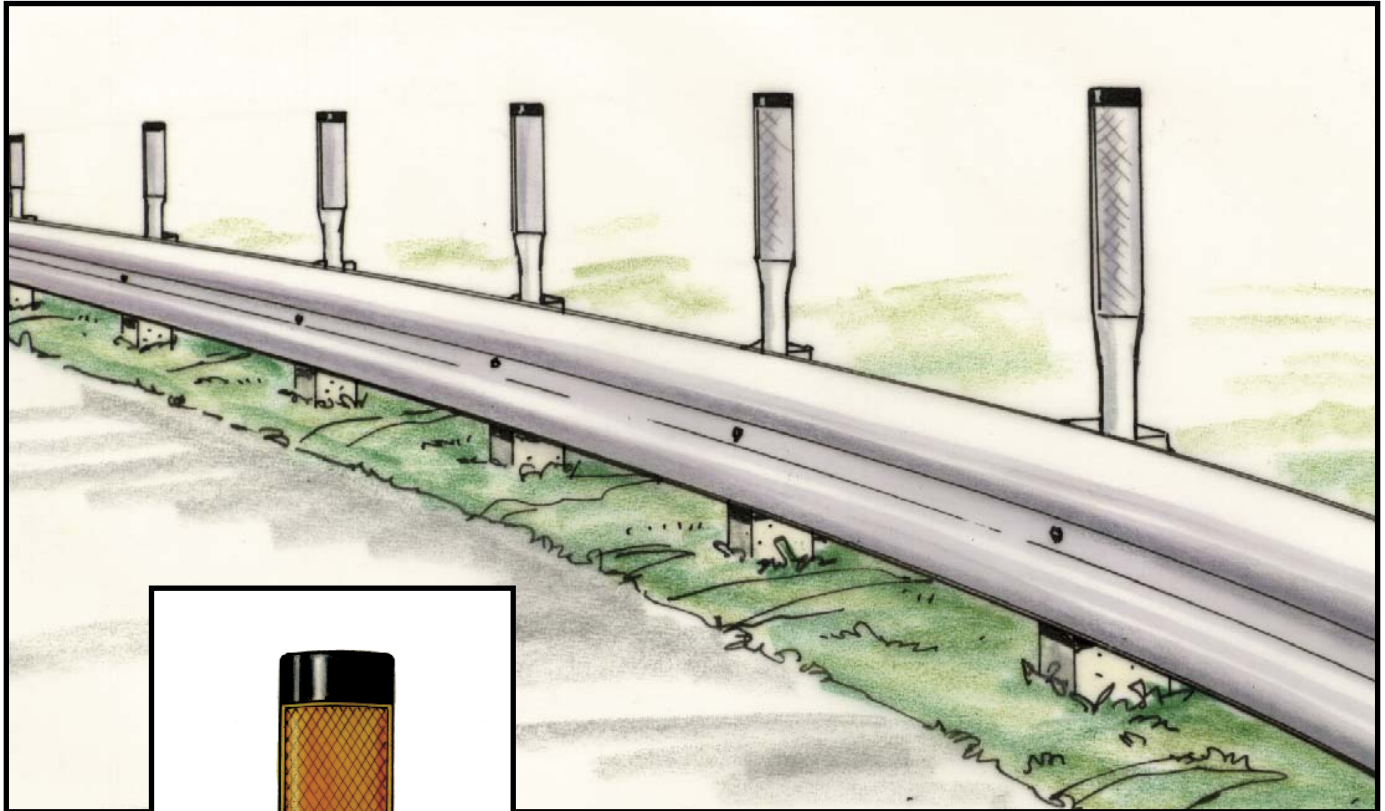

27" GUARD RAIL DELINEATOR

Instructions:

1. Reflector must face traffic.
2. Top nail to be fastened 1" below post surface.
3. Drive both galvanized nails through neoprene washers and post.

GALVANIZED NAIL
AND
NEOPRENE WASHER

NOTE: Use 5/16" hex driver for units supplied with self-tapping HILTI screws.

SAFE-HIT
Toll Free
Customer Service
HOTLINE
1-800-537-8958

SAFE-HIT
A Division of Energy Absorption Systems, Inc., a Quixote Company

SAFE-HIT, 35 EAST WACKER DRIVE, SUITE 1100, CHICAGO IL 60601
PH: (800) 537-8958 FX: (800) 770-6755