



Dura-Post™ Surface Mount Butyl Pad Installation Instructions

For Installation on Asphalt or Concrete

Caution: Always wear protective clothing and personal protective equipment (PPE) such as eye protection, work gloves, and steel toe work boots while doing the following work.

1. Check that you have all parts necessary for the installation. You should have post(s), surface mount base(s) and butyl pad.



2. Locate and mark Dura-Post™ location(s). A clean, dry surface is required.
3. Sweep or blow off area with compressed air to remove all gravel, sand and other debris within a one foot diameter where the base will be installed.

Note: For optimum performance, the recommended installation temperature is 50 degrees F or above. In lower temperatures, the bases and pads can be warmed to this temperature prior to use.


4. Remove the slip sheeting from one side of the Butyl Pad and place it on the ground with the exposed surface facing up.



5. Set the Dura-Post™ base on the Butyl Pad, centering it within the edges of the pad. Press on the base to secure it to the pad.



6. Lift the base and remove the remaining slip sheet from the other side of the pad.
7. Place the base in position making sure it is oriented properly. Be sure that the arrow is facing traffic. Press base down firmly on surface.

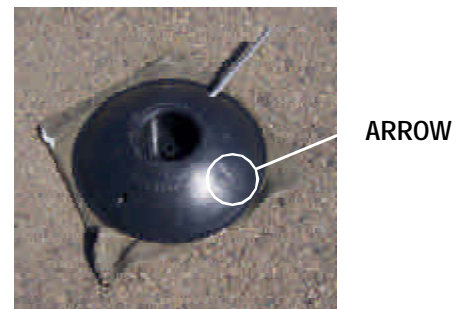

8. Slowly drive the vehicle up onto the base and stop so one of the front wheels is directly on top of the base. Remain in this position for at least 15 seconds to "set" the base.
9. Allow to cure approximately one hour (when temperature is above 80 deg.) before installing post (allow extra time for cold weather).
10. Insert post and drive locking pins in place with hammer. To remove post, use drift pin to remove locking pins, then lift post from base.

